Oven

De Dietrich

TABLE OF CONTENTS

EN

1 / NOTICES TO THE USER
- Safety Instructions ____ 04
- Caring for the Environment ____ 05

2 /INSTALLING YOUR APPLIANCE
- Choice of location ____ 06
- Fitting ____ 06
- Electric connection ____ 07

3/ DESCRIPTION OF YOUR APPLIANCE
- Accessories ____ 09

4 / CARING FOR AND CLEANING YOUR APPLIANCE
- Cleaning the outer surfaces ____ 10
- Cleaning the door ____ 11
- What is pyrolysis? ____ 13
- When should pyrolysis be used? ____ 13

5/TROUBLESHOOTING ____ 14

6 / AFTER-SALES SERVICE ____ 15

Warning

Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives the user guide. Please become familiar with these recommendations before installing and using your oven. They were written for your safety and the safety of others.

• *SAFETY GUIDELINES*

– This oven was designed for use by private persons in their homes. It is intended solely for cooking foodstuffs. This oven does not contain any asbestos-based components.

– Please make sure children do not play with the appliance.

– When you receive the appliance, unpack it or have it unpacked immediately. Give it an overall inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form.

– Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for which it was designed.

– Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

– WARNING: accessible parts may be hot when in use. It is advisable to keep small children away from the appliance.

– Never pull your appliance by the door handle.

– Before using your oven for the first time, heat it while empty for approximately 15 minutes. Make sure that the room is sufficiently ventilated. You may notice a particular odour, or a small release of smoke. All of this is normal.

–WARNING: accessible parts may become hot when the grill is used. It is advisable to keep children away from the apppliance.

– When in use, the appliance becomes hot. Be careful not to touch the heating elements located inside the oven.

– When placing dishes inside or removing them from the oven, do not place your hands close to the upper heating elements, use heat-protective kitchen gloves.

–During pyrolysis, the exposed surfaces become hotter than during normal use. It is advisable to keep small children away from the oven.

–Before beginning a pyrolysis cleaning cycle in your oven, remove all parts of your grids, trays and accessories and remove major spill residue. During pyrolysis, exposed surfaces become hotter than during normal use. It is advisable to keep small children away from the oven.

– At the end of cooking, do not pick up dishes (grills, rotisserie...) with bare hands.

– Never place aluminium foil directly in contact with the oven shelf (see the chapter on oven description), the accumulated heat may cause deterioration of the enamel.

– Do not place heavy weights on the open oven door, and make sure that children are able neither to climb nor sit on it.

– The oven must be turned off when cleaning inside the oven.

– This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental abilities, or persons lacking experience or awareness, unless using it with the help of a person responsible for their safety, or under supervision and with prior instruction in its use.

– Additionally to the accessories supplied with your oven, only use dishes which resist high temperatures (follow the manufacturer's instructions).

– After using your oven, make sure that all the controls are in their stop position.

– Do not use your oven as a larder or to store any items after use.

– Never use steam or high-pressure devices to clean the oven (electrical safety requirement).

-All types of cooking are done with the door closed.

– ***(According to model)*** For your safety, your oven is equipped with an AUTOMATIC STOP, if you forget to turn off your oven by mistake. After 23 hours and 30 minutes of continuous use, the AS (Automatic Stop) feature will be activated and your oven will turn itself off. AS or Auto Stop will be displayed instead of the time and a series of successive beeps will be emitted for a short time.

• *CARE FOR THE ENVIRONMENT*

–This appliance's packing materials are recyclable. Recycle them and play a role in protecting the environment by depositing them in municipal containers provided for this purpose.

– Your appliance also contains many recyclable materials. It is therefore marked with this logo to indicate that used appliances must not be mixed with other waste. Recycling of the appliances organised by your manufacturer will thus be undertaken in optimum conditions, in accordance with European directive EC/2002/96 relating to electrical and electronic equipment waste. Consult your local authority or your retailer to find the drop-off points for used appliances that is nearest to your home.

– We thank you for your help in protecting the environment.

Warning

Installation should only be performed by installers and qualified technicians.

This appliance complies with the following European directives :

- Low Voltage Directive 2006/95/CE for affixing the CE mark.

- Electromagnetic Compatibility Directive 89/336/CEE modified by directive 93/68/CEE for attaching the CE mark.

- EC regulation no. 1935/2004 concerning materials and objects intended for contact with food substances.

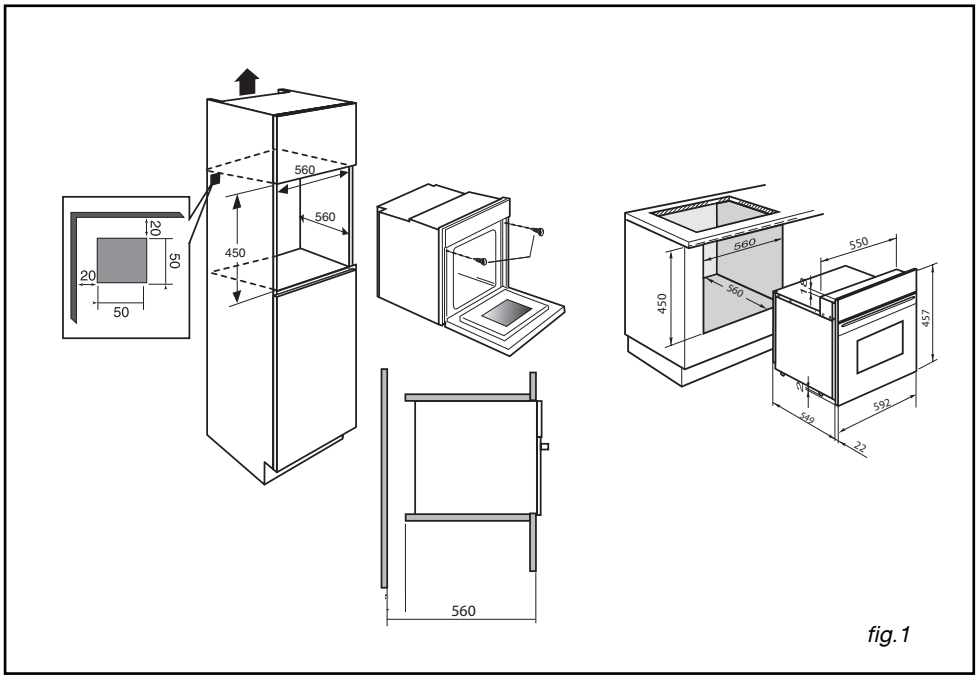

fig.1

• *CHOICE OF LOCATION*

The above diagrams determine the dimensions of a cabinet that will be able to hold your oven.

The oven can be installed under a work top or in a column of cabinetry (open* or closed) having the appropriate dimensions for built-in installation (see adjacent diagram).

Your oven has optimised air circulation that allows it to achieve remarkable cooking and cleaning results if the following guidelines are followed :

• Centre the oven in the cabinet so as to guarantee a minimum distance of 10mm between the appliance and the neighbouring cabinet.

• The material or coating of the cabinet must be heat-resistant.

• For greater stability, attach the oven in the cabinet with two screws through the holes provided for this purpose on either side of the front inner panel (fig 1).

• *BUILD-IN*

To do this :

1) Drill a hole in the cabinet panel to avoid splitting the wood.

2 Attach the oven with the two screws.

Tip

To be certain that you have properly installed your appliance, do not hesitate to call on a household appliance specialist.

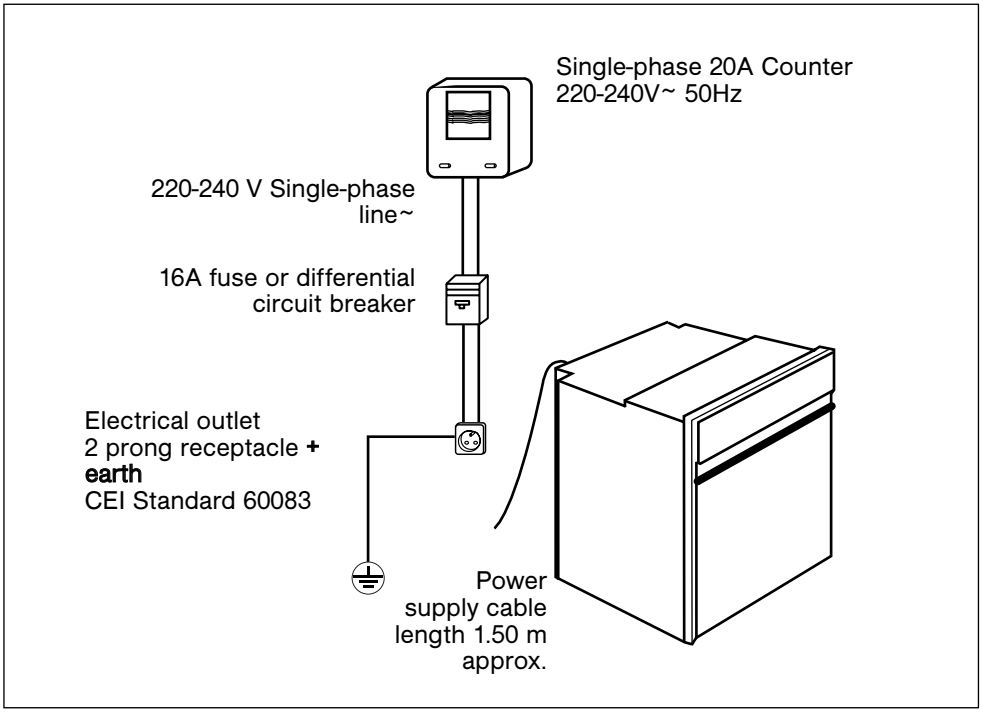

• *ELECTRIC CONNECTION*

The appliance must be fitted correctly to guarantee electrical safety. During fitting and maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be switched off or removed.

The electrical connections are made before the appliance is installed in its housing.

Ensure that:

- the electrical installation has sufficient voltage,
- the electrical wires are in good condition,
- the diameter of the wires complies with the installation requirements.

The oven must be connected with a power cable (standardised) with 3 1.5mm^2 conductors (1 ph +1N + ground) that must be connected to a monophase 220-240 V~ network via a CEI 60083 standardised receptacle 1 ph + 1 neutral + ground lead or an all-pole cut-off device in accordance with installation rules.

Warning

The safety wire (green-yellow) is connected to the appliance's terminal ⏚ and must be connected to the earth terminal of the electrical set-up.

You must enable the appliance to be disconnected from the supply network after installation.

Disconnection can be enabled by ensuring that there is an accessible power plug or by incorporating a switch into the fixed wiring in compliance with the installation rules.

The fuse in your set-up must be 16 amperes.

If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or a similarly qualified person to avoid danger.

Warning

We cannot be held responsible for any accident resulting from inexistent, defective or incorrect earthing.

If the electrical installation in your residence requires any changes in order to hook up your appliance, call upon a professional electrician.

If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector where the oven is hooked up.

• *ACCESSORIES*

• *Safety grid (fig.1)*

The grid can be used to hold all dishes and moulds containing foodstuffs to be cooked or browned.

It can be used for barbecues (to be placed directly on the grid).

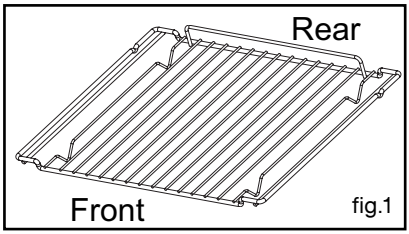

fig.1

• *Multi-purpose 45 mm dish (fig.2)*

When inserted in the supports under the grid, it collects juice and fat from grilling, and can be used half-filled with water as a double-boiler.

Avoid placing roasts or meat directly in the dish because this is certain to cause significant spattering on the oven walls.

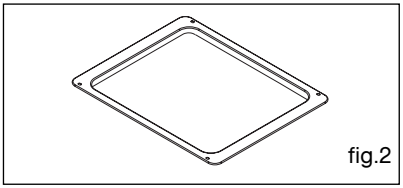
fig.2

• *ACCESSORIES*

• *Rotisserie (fig.3)*

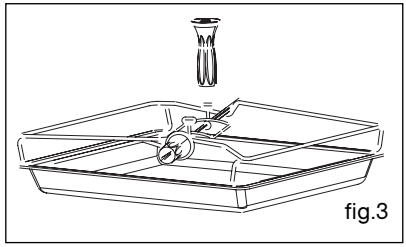
fig.3

Slide one of the forks onto the spit; skewer the piece of meat to be roasted; slide on the second fork; centre and tighten by screwing the two forks.
Place the spit in its cradle: place the cradle on the sloped enamelled dish, slide the cradle in at shelf support 2, push it lightly to engage the end of the spit into the guide slot at the back of the oven.
The cradle should be placed in the sloped enamelled dish.
Slide the cradle in at shelf support 2 and the dish at the 1st level.
Remove the handle by unscrewing it, so you can close the door. After cooking, screw the spit handle on again to remove the roasted meat without burning yourself.
N.B. : if you want to put something large onto the spit, in order to prevent it from touching the back of the dish and stopping the spit from turning, you can place the dish on the floor of the oven and engage the cradle at support 2

• *Multi-purpose 5 mm dish (fig.4)*

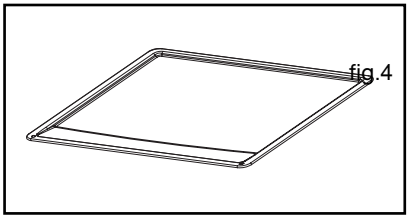
fig.4

It serves as a cake dish and has a sloped edge. It is used for cooking pastries such as cream puffs, meringues, cup cakes, puff pastry, etc.

• *CLEANING THE OUTER SURFACES*

To clean both the electronic programmer window and the oven door, use a window washing product applied to a soft cloth.
Do not use abrasive creams or scouring sponges.
To preserve your appliance, we recommend that you use Clearit cleaning products.

Professional expertise
working for you at home

Clearit offers you professional products and solutions designed for the daily care of your household appliances and kitchens.
They are on sale at your regular retailer, along with a complete line of accessories and consumable products.

• *CLEANING THE INSIDE OF THE DOOR*

• *Disassembling the door*

Warning
Before removing the glass window, allow the appliance to cool down.

- Open the door completely and block it open using the two red stops (fig.1).
They are supplied with your machine in the plastic pack.

- To remove the frame and glass assembly, proceed as follows:
Insert the two red stops in the **A** slots designed for this (fig.2).

- Lever the assembly to detach the frame and the glass (fig.3).

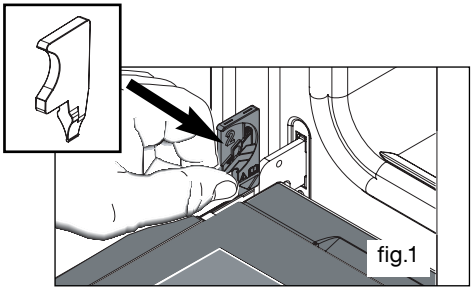
fig.1

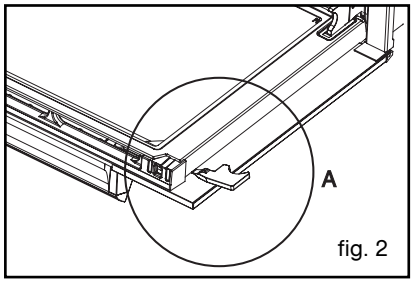

fig. 2

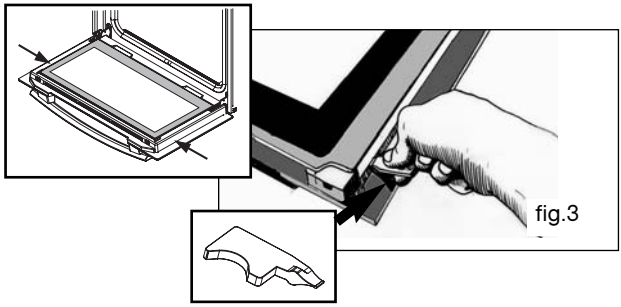
fig.3

- Remove the frame and the glass (fig.4).

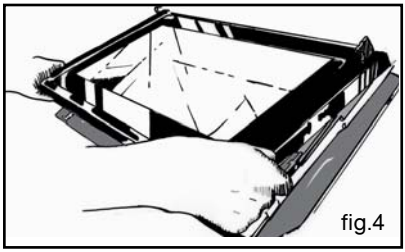
fig.4

- Remove all the door's interior windows by rotating them.
This assembly comprises 2 glass windows, the 1st of which has 2 rubber stops on the 2 front corners.(fig. 5).

- Clean the glass using a soft sponge and washing-up liquid.
Do not soak the window in water.
Do not use abrasive creams or scouring sponges. Rinse with clean water and dry off with a lint-free wiper.

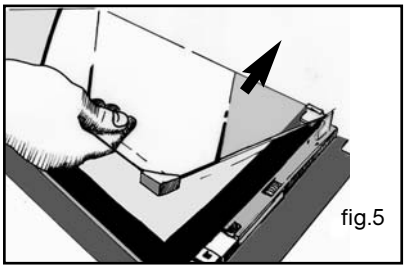
fig.5

- After cleaning, replace the 1st glass in the door.
Reposition the 2 black rubber stops on the front corners of the 2nd glass, making sure that the it says:

at top left: L
at top right: R

Then replace the door and the 2nd glass, positioning it on the first (fig.6).

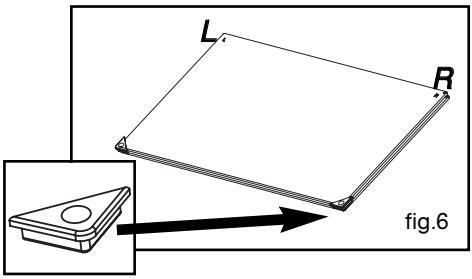

fig.6

Warning
Do not use abrasive cleaning products or hard metallic scrapers for cleaning the oven's glass door, as they could scuff the surface and cause the glass to shatter..

Place the glass frame assembly back in the door (fig. 7).

- **Take care to correctly slot the frame under the spigot next to the hinge** (fig.8).

- Attach the frame by tightening it with the door. Do not press on the frame alone. (fig.9).

Your appliance can now be used again.

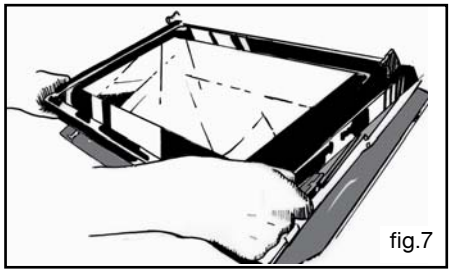
fig.7

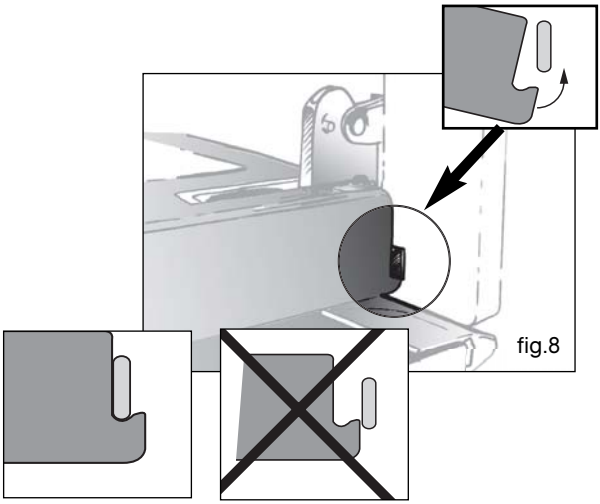
fig.8

Warning

Do not use abrasive cleaning products or hard metallic scrapers for cleaning the oven's glass door, as they could scuff the surface and cause the glass to shatter..

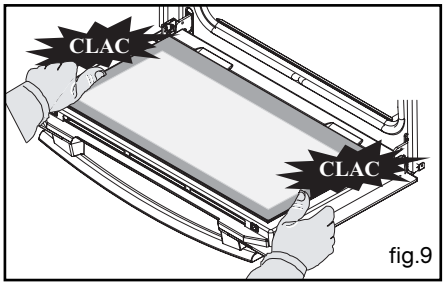

fig.9

• *WHAT IS PYROLYSIS ?*

Warning
Remove any cookware, grids and trays from the oven and clean any major spill residue before carrying out the pyrolysis.

Tip
Your oven is equipped with enamelled wire shelf supports : these need to be removed before running the pyrolysis cycle.

- Pyrolysis is a cycle during which the oven cavity is heated to a very high temperature in order to eliminate soiling from splattering and spills. The smoke and odours released are destroyed as they move through a catalyser.

- Pyrolysis is not necessary after each cooking cycle, simply when the degree of soiling warrants it.

- As a safety measure, the cleaning operation only begins after the door has automatically locked. As soon as the internal temperature of the oven exceeds cooking temperatures, it is impossible to unlock the door even if the “cancel function” switch is set to 0.

• *WHEN TO USE PYROLYSIS*

If your oven emits smoke during preheating or releases large amounts of smoke during cooking. If your oven releases an unpleasant odour when cooled after various cooking applications (lamb, fish, barbecue, etc...).

Relatively clean cooking operations	Biscuits, vegetables, pastry, quiches, soufflés	Splatter-free cooking : pyrolysis is not warranted.
Messy cooking operations	Meats, fish (in a dish), stuffed vegetables.	Pyrolysis may be warranted after three cooking cycles.
Very messy cooking operations	Large cuts of meat on the spit.	Pyrolysis can be performed after one cooking application of this kind, as there is a lot of

Tip
You should not wait until the oven is overly coated in grease to initiate a cleaning cycle.

If you have a doubt about the correct functioning of your oven, this does not necessarily mean that there is a malfunction. ***In any event, check the following items :***

YOU OBSERVE THAT...	POSSIBLE CAUSES	WHAT SHOULD YOU DO?
The oven is not heating.	- The oven is not connected to the power supply. - Your fuse is out of order. - The selected temperature is too low.	➡ Plug in your oven. ➡ Replace the fuse in your electrical set-up and check its capacity (16A). ➡ Increase the selected temperature.
*** The padlock is flashing**	- Problem with the door's locking mechanism.	➡ Call the After-Sales Service Department.
The oven light is not working.	- The light is out of order.	➡ Call the After-Sales Service Department.
***The pyrolysis cleaning cycle does not begin.**	- The door is not properly closed. - The locking system is defec-	➡ Check that the door is locked. ➡ Call the After-Sales Service Department.
Your oven starts beeping.	- During cooking. - At the end of a cooking cycle.	➡ The recommended temperature of your choice has been reached. ➡ Your programmed cooking cycle is finished.
The cooling fan continues to operate after the oven stops.	- The fan should work for a maximum of one hour after cooking, or when the oven temperature is greater than 125°C. - If it does not stop after 1 hour	➡ Open the oven door to accelerate the cooling down of the oven ➡ Call the After-Sales Service Department.

***** **Only for models with the pyrolysis function.**

Warning

- Repairs to your appliance should only be performed by professionals. Non-standard repairs may be a source of danger for the user.

Tip

In all circumstances, if your efforts are not sufficient, contact the After-Sales Service Department without delay.

• *SERVICE CALLS*

Any repairs that are made to your appliance must be handled by a qualified professional authorised to work on the brand. When you call, mention your appliance's complete reference (model, type, serial number). This information appears on the manufacturer's nameplate *(Fig.1).*

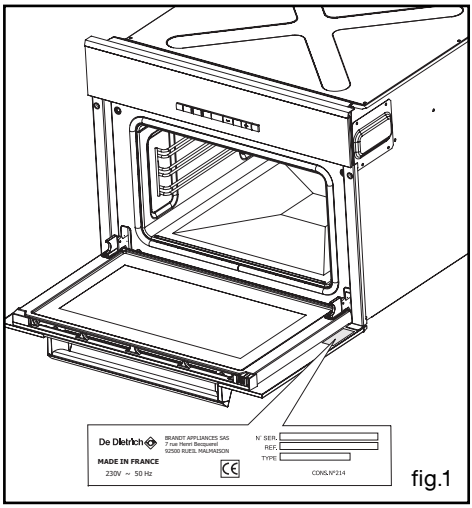

fig.1

ORIGINAL PARTS

During maintenance work, request the exclusive use of ***certified genuine replacement parts.***